



PRODUCT WARNING

1. Do not lean diffuser during operation.
2. Unplug from mains power when filling or cleaning.
3. Do not empty water from the side which the air vent is located.
4. This appliance is not intended for use by children.
5. If the diffuser is accidentally knocked over during operation, water may enter the internal space. If so, please unplug the diffuser, empty any remaining water and allow to dry for 3 days. If any issues arise please contact your local retailer.

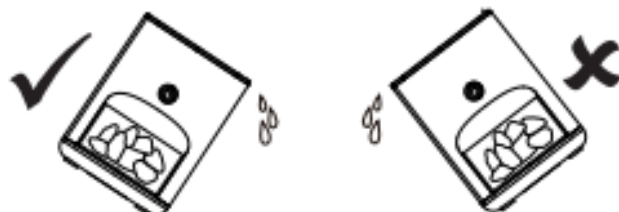

JAVA Ultrasonic Aroma Diffuser

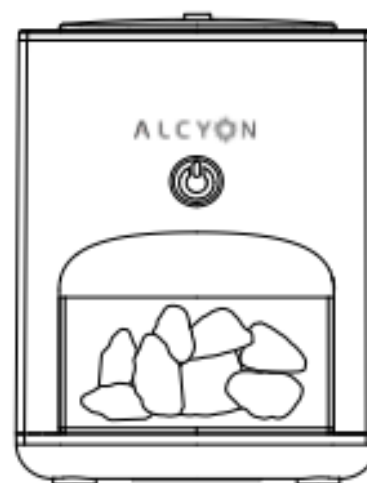

ALCYON

www.alcyon.com.au

ALCYON

www.alcyon.com.au

TABLE OF CONTENTS:

- A** Function
- B** Diffuser Setup
- C** Operations
- D** Maintenance
- E** Troubleshooting
- F** Warranty



FUNCTION


Introducing the JAVA Aroma Diffuser: Technology meets Tranquillity to provide you with aromatherapy, calm and soothing illumination all at once.

Utilising the instantaneous benefits of ultrasonic vibrations and Himalayan salt, purify and revitalise any home with the next step in holistic wellness. JAVA is the perfect result that two perfect worlds collide!

B


SETUP

Location of Controls

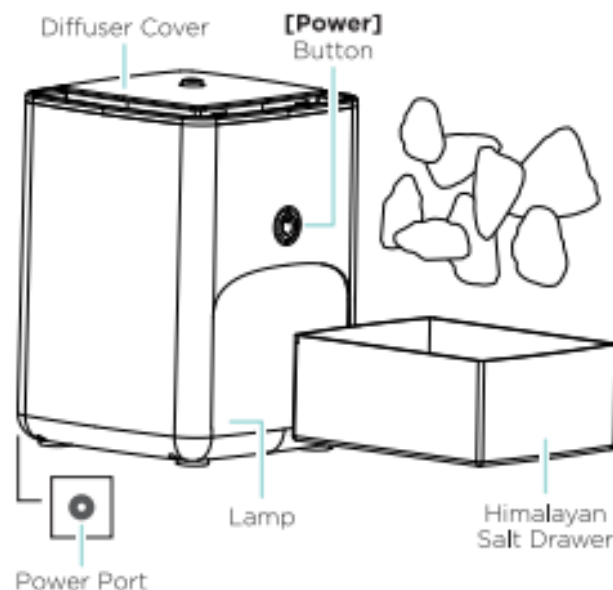

Setting Up

1. Choose a location for the diffuser on a hard, stable surface near a wall socket, and away from wind, heat and water.
2. Plug the pin of the included power adapter into the Power Port on the back of the diffuser. Plug the other end into a wall socket.

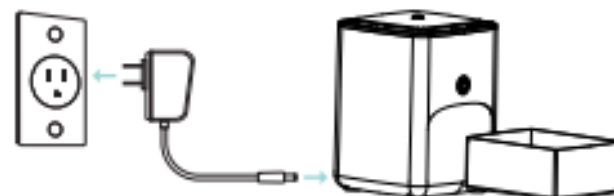


3. Pull out the Himalayan salt drawer and carefully place the included Himalayan salt rocks in the drawer. Close the drawer.



Note: When not in use, it is recommended to keep the Himalayan salt rocks sealed in a plastic bag to protect them from moisture.



OPERATION I

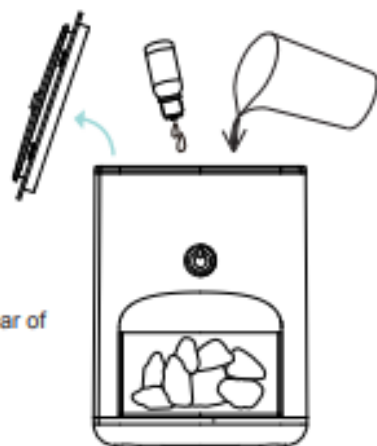

1. Place diffuser on a flat and even surface, clear of any loose or foreign objects.
2. Fill water tank to max level line - 150ml.
3. Replace cover and connect power.
4. Add up to 4-6 drops of essential or fragranced oils.
5. Press the Power Button to activate.



Diffuser Operation			
① Power Button	Diffuser	LED Light	Salt Lamp
First	Off	Off	On
Second	On	On (Colour Changing)	On
Third	On	On (Fixed Colour)	On
Fourth	On	Off	Off
Fifth	Off	Off	Off

Product Name: JAVA Aroma Diffuser
Voltage: DC 24V
Power: 20 w
Water Capacity: 150 ml
Mist Output: 25 ml/h
Duration: 6+ hrs Constant
Salt Lamp: Amber Colour
LED Effect: Colour Changing or Fixed Colour modes



MAINTENANCE

To keep your diffuser in great working order, we recommend using Alcyon Diffuser Cleanser to clean regularly.

Alcyon Diffuser Cleanser - Revive and restore your diffuser like new. Most manufacturers recommend cleaning your diffuser every few weeks to remove impurities. Run for a 2-hour cycle and eliminate all the residual sediment and harmful particles left over from essential oils which impairs mist output and therapeutic performance. Alcyon Diffuser Cleanser makes it easy to keep your diffuser working like new so you can enjoy all its health benefits and get the full effect and pleasure from essential oil and aromatherapy.

To purchase please visit: www.alcyon.com.au



Directions:

Pour 50 to 100ml of diffuser cleanser into water tank of diffuser depends on its size. Run diffuser for 2 hours or until all cleanser in the tank has been diffused.

Remove any excess cleanser and rinse water tank thoroughly then wipe it clean with a soft cloth.

Resume normal use as per manufacturers operating instructions.

Ingredients:

Aqua, Potassium Lauroyl Sarcosinate, Potassium Cocoyl Glycinate, peg-6 Caprylic/capric Glycerides, beta-glucan, Dmdm Hydantoin, aroma

Caution:

For external use only. In case of contact with eyes, flush thoroughly with water. If eye irritation persists, get medical attention.



TROUBLESHOOTING

Symptom	Possible Cause	Solution
NO MIST	Power not connected	Plug in power adaptor and press mist button to activate
	Insufficient water	Fill tank with water
	Too much water (300ml+)	Tip out excess water
	The mist outlet blocked by water droplets or oil build-up	Clean outlet vent cotton tip
	Poor performance due to dirty	Clean ultrasonic pad
	Cover not seated or sealed properly against base unit	Reseat cover



WARRANTY CARD

All Alcyon Ultrasonic Diffusers are covered by a limited one year warranty from date of purchase.

Date of purchase: ____ / ____ / ____
(please keep your receipt with Warranty Card as Proof of Purchase)

Should you be experiencing any issues with your diffusers, please visit www.alcyon.com.au or call 1300 882 332.
(please have your diffuser on hand when calling)

Terms and Conditions:

- A dated receipt is required as Proof of Purchase for warranty purposes.
- This warranty is for operational faults only, and does not cover issues such as breakages or faults arising from misuse.
- Any returned items from customers to Alcyon will be at the consumer's expense and must be accompanied with a RA (Return Authorisation) number issued by Alcyon. Unless a prior arrangement has been made.
- Any goods received without a RA number will not be accepted and returned to the sender.
- The determination of faults is at the discretion of Alcyon Australia, with the item to be either repaired or replaced.
- Return shipping from Alcyon to the customer is to be at Alcyon's expense.

Alcyon Australia
PO Box 50
LINFIELD NSW 2070

1300 882 332

info@alcyon.com.au